



PLANTA GENERAL

92 VIVIENDAS

BLOQUE 4				BLOQUE 5				BLOQUE 6			
4-2-1	4-2-2	4-2-3	4-2-4	5-2-1	5-2-2	5-2-3	5-2-4	6-2-1	6-2-2	6-2-3	6-2-4
4-1-1	4-1-2	4-1-3	4-1-4	5-1-1	5-1-2	5-1-3	5-1-4	6-1-1	6-1-2	6-1-3	6-1-4
4-0-1	4-0-2	4-0-3	4-0-4	5-0-1	5-0-2	5-0-3	5-0-4	6-0-1	6-0-2	6-0-3	6-0-4

